


Instructions for Programmable Wireless Controller

(model: T19XWHB-7DF-APP(TY))

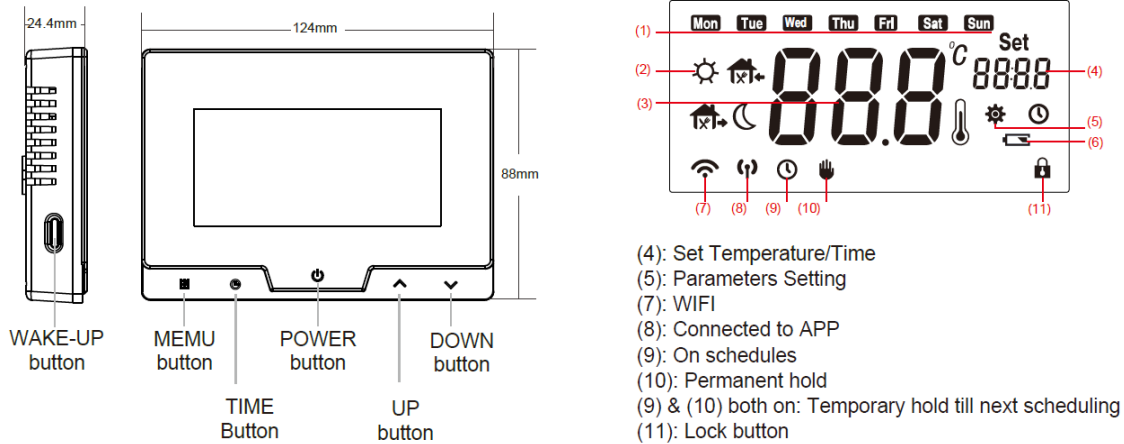

Where to put it:

The wireless controller should be placed in an area where there is a relatively stable temperature (i.e. not in the main living area where there is solar gain). This will give your floor a better chance to regulate your comfort level to a more even temperature.

How to set it:

On & Off:

Press the 'Wake-Up' button on the side. If the controller shows 'OFF', then press and hold the 'power' button until the unit beeps and turns on. To turn it off, press and hold the 'power' button until the screen shows 'OFF'.

Set up the current time and day:

- Press and hold 'power' for 5 seconds. When 'y' (year) starts flashing, use the up/down arrows to set the year
- Press power to save. 't' (time) should start flashing. Use the up/down arrows to set minute first, then hour
- Press 'power' to save. 'd' (date) should start flashing. Use the up/down arrows to set the date
- Press 'power' to save. 'm' (month) should start flashing. Use the up/down arrows to set the month

Maintain one temperature at all times (with the thermostat switched on):

- Use the arrows to adjust the set temperature
- Press to hold this setting. The hand symbol should be shown on the screen.
- If you would like to cancel this setting and return to the schedule, press the menu button again. The clock symbol should be shown on the screen meaning it has been returned to the schedule.

Set up the temperature programme (with thermostat switched on)

- Press and hold the 'menu' button to until the days start flashing meaning you have entered programming mode. Use the arrows to toggle between "Mon-Sun", or "Mon-Fri" and "Sat-Sun", or daily mode.
- Press the 'menu' button to go into daily settings. The default is 4 sets per day. Use the arrows to set the first time.
- Press the 'menu' button again to save the time schedule and move onto setting the temperature. Use the arrows to select the target temperature for this time slot.
- Repeat the two steps above until you have set the full program. If no button is pressed for 10 seconds, the thermostat will automatically exit the program set up.

Note: Hydronic underfloor heating where there are pipes in the concrete foundation is a slow response system, not an instant heating system. Please anticipate a few hours of lag time while setting up your programme.