

### Wireless Controller Instructions

Programmable Wireless controller: (model: SAS908WHB-3TR)



#### Where to put it:

The wireless controller should be placed in an area where there is a relatively stable temperature i.e. not in the main living area with solar gain. This will give your floor a better chance to regulate your comfort level to a more even temperature.

**For the DualHEAT systems only:** the wireless controller should be set up to turn the underfloor heating OFF a couple of hours before quantities of hot water are required; ie at 5am and 7pm for example, this will ensure a cylinder full of hot water is available in the morning and evening.

#### How to set it:

We recommend to run the system during the day as the heat pump efficiency is higher.

**On & Off :** The red button, top left, turns the thermostat on and off.

- when it is turned on, it shows “Prog running”
- When it is turned off, it shows the present temperature only

#### Set up the current time and day:

Set the correct time and day by pressing the clock symbol.

First press is hours (then use up and down arrows on right) second press is minutes, third press is day of week. Press ‘R’ to exit

#### Set up the temperature programme

Press ‘P’, and 1 will show. Adjust the time by using up/down buttons – adjust the temperature required by first pressing clock button – then use arrows. The thermostat will try and maintain this temperature until the time shown by pressing ‘P’ again and 2 will show. Adjust the time and temperature as above as required. The thermostat will maintain this temperature until the time set chosen for 3 (press ‘P’ again). Note that after going through 1, 2, 3, and 4 for Monday to Friday – the thermostat next shows 1 for Saturday. Press ‘R’ to exit at any time.

#### To maintain a set temperature at all times:

1. press and hold the ‘R’ button for five seconds until “Hold” is shown.
2. Adjust the temp on the right-hand side using the up and down arrows. Press ‘R’ to cancel this feature

Note: Replace the two AA batteries in the back when the controller says “Low Battery”