



Wireless Controller Instructions

Programmable Wireless controller: (model: SAS908XWHB-7-DF1)

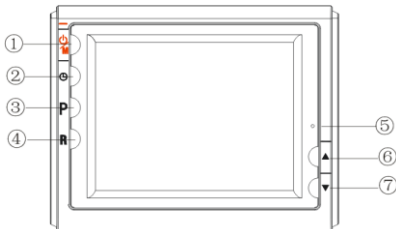

- 1 Pwer on/off button
- 2 Time setting button
- 3 Program Setting button
- 4 Confirm/Exit button
- 5.Reset button
- 6.Up button
- 7.Down button

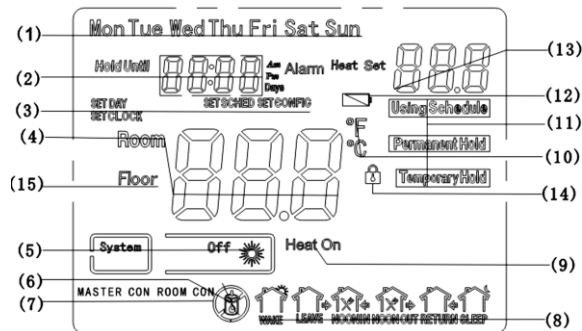

- Current displays: (1) Week days (2) Time (3) Setting (4) Room temperature display (5) System running indicator (8)program mode (10)Temperature unit : C/F (11)Operation mode (12) Low Battery indicator (13)Setting temperature (14) Lock key

Where to put it:

The wireless controller should be placed in an area where there is a relatively stable temperature i.e. not in the main living area with solar gain. This will give your floor a better chance to regulate your comfort level to a more even temperature.

For the DualHEAT systems only: the wireless controller should be set up to turn the underfloor heating OFF a couple of hours before quantities of hot water are required; ie at 5am and 7pm for example, this will ensure a cylinder full of hot water is available in the morning and evening.

How to set it:

On & Off : The red button, top left, turns the thermostat on and off.

- when it is turned on, it shows “Using schedule”
- When it is turned off, it shows the present temperature only

Set up the current time and day: Set the correct time and day by pressing the clock symbol.

First press is, mintues (then use up and down arrows on right) second press is hours, third press is day of week. Press ‘R’ to exit

Set up the temperature programme with thermostat switched on

Press ‘P’, and 1 will show. Adjust the day by using up/down buttons. The thermostat will try and maintain this temperature until the time shown by pressing ‘P’ again and 2 will show.

Adjust the time and temperature as above as required. The thermostat will maintain this temperature until the time set chosen for 3 (press ‘P’ again). Note that after going through 1, 2, 3, and 4 for Monday to Friday – the thermostat next shows 1 for Saturday. Press ‘R’ to exit at any time.

To maintain a set temperature at all times (with thermostat switched on)

1. press and hold the ‘P’ button for five seconds until “permanent hold” is shown.
 2. Adjust the temp on the right-hand side using the up and down arrows.
- Press ‘R’ to cancel this feature

Note: Please change the batteries in the back when “low battery” indicator (12) shows.